

S16 Firmware Update

Version 2.5 - (30 September 2020)

This document provides information on the firmware update 2.5 for the Behringer S16 Stagebox. Version 2.5 for S16 enables to forward DP48 Messages via AES50 when daisy chaining multiple devices. The firmware update can easily be done via USB using a Windows PC/laptop computer. Please follow the update instructions at the end of this document.

This new S16 Firmware version contains:

New Features

- Forwarding of DP48 Messages via AES50

Improvements

- n/a

Requirements:

Behringer X32 / Midas M32 series console firmware 4.02 or higher recommended for optimal use with S16 firmware 2.5.

Windows (10, 7 or 8.1) PC with USB connector and administrator account required for running the updater executable (s16update_2-5.exe).

Behringer is constantly adding new features and making enhancements to this extremely stable ecosystem of digital mixers, I/O boxes and personal monitoring mixers. This means you always experience the best possible performance.

Visit behringer.com and check for updates of your products regularly.

Update Process:

1. Download and unpack the updater zip file from behringer.com on your Windows PC
2. Connect the S16 USB port to your PC using a standard USB cable (type A -- type B)
3. Hold the CONFIG button depressed while switching the S16 on
4. The S16 display will show the current firmware version on its display
5. Make sure you have started your Windows session with Administrator access, then start the updater executable
6. The terminal window will inform you about the update progress. Wait approximately 1 min until it shows completed.
7. Disconnect the USB link and switch the S16 power off / on
8. If you wish, you may check if the update has successfully been loaded by holding the
9. CONFIG button while power cycling the S16, again.
10. Note, that the display will only show the firmware version while being connected via USB.